


# SUNTUF® Rooflights Technical Guide

## Profile: 6600 (SAF 760)



11/03/2013

### Profile Drawing

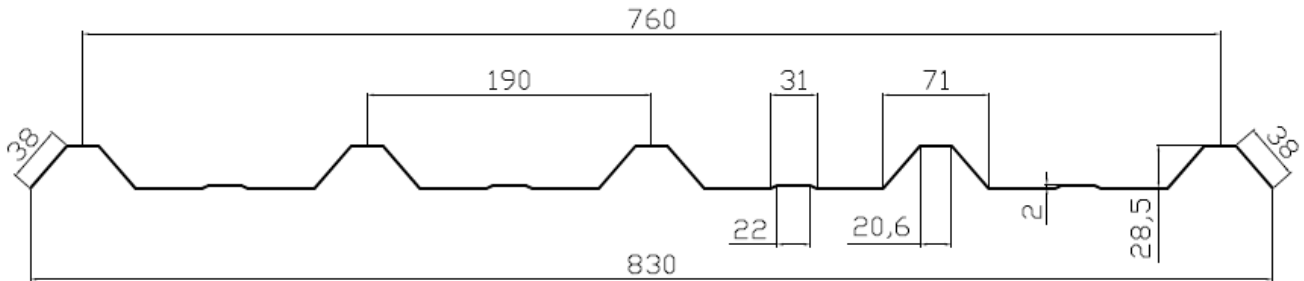

### Profile Dimensions

Profile (mm)	Thickness (mm)	Length (m)	Overall width (mm)	Cover Width (mm)	Side-Lap (%)
190 / 28.5	1.0 – 2.0	1.5 - 11.8	830	760	8.4


### Load / Span Data

Load (kg/m <sup>2</sup> )	Maximum Roof Span (mm)			
	1.0 mm		1.25 mm	
	Mid Span	End Span	Mid Span	End Span
50	1250	940	1350	1010
75	1100	825	1200	900
100	1000	750	1050	790
125	900	675	1000	750
150	850	640	950	710

- The specified dimensions do not supersede the requirements of local construction codes.
- The given spans are according to deflections criterion of L/20, and minimum slope of 10%.
- The maximum roof spans are based on calculation model and practical testing.
- The mentioned load refers to wind and snow load only.
- For vertical application spans can be increased by 10%.

### Panel Length

- Maximum recommended panel length - 7.0 m.
- Recommended longitude overlap of 200mm above purlin.
- Each panel to extend 100mm over the fixings line on the purlin.
- Panels should overhang Min. 50mm and Max. 150mm beyond the last fixings line.

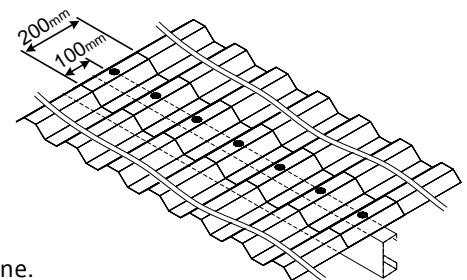

### Curved Roof

- Minimum curving radius 13.0 m.



# SUNTUF® Rooflights Technical Guide

## Profile: 6600 (SAF 760)



11/03/2013

### Positioning


- Make sure the UV protected side faces out.
- Lay the SUNTUF panel to overlap metal panels on both sides. If not feasible -
- SUNTUF Rooflight panels must underlap the metal roof panels against the primary direction of rain.
- The SUNTUF sheet must be located and installed without any stresses.




Do not pull, stretch or force the sheets when the profiles are not perfectly matched.

### Fastening

- Apply sealing tape along the Side-Lap metal panel's corrugation crests, on both sides.
- Apply sealing tape along the SUNTUF panel's side-lap, where covered by the Metal panel.
- Apply sealing tape along the bottom and top End-lap (if there is), along screws centerline or two tapes on both sides of screw centerline.
- Pre-drill 10mm holes at crests where screws are positioned.
- Start fastening the screws from the first side-lap (left) through the pre-drilled holes (2).
- Start fastening the screws on the lower edge purlin (End-lap), on each corrugation crest (1).
- Fasten screws at the internal and upper edge purlins, at each corrugation crest, starting at the same side (1, 2).
- **Do not over-tighten!**
- Fasten the stitching screws at the side-lap every 300-400 mm (3).

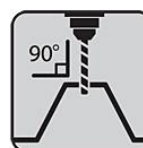

### Fastening Location

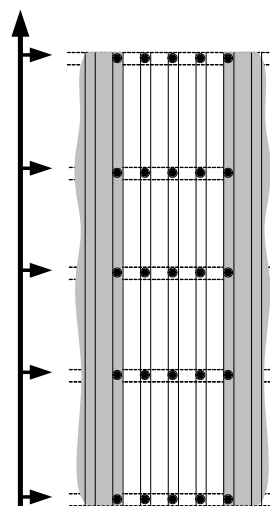

### Screws and Washers Specification

- Crest fixing: Self-drilling 5.5mm x 75mm (3") screw + matched metal crest rider (Storm washers) with EPDM gasket.
- Side Stitching: 5.5mm x 19mm (3/4") self-tapping screw with 19 mm washer/gasket.



# SUNTUF® Rooflights Technical Guide

## Profile: 6600 (SAF 760)



11/03/2013

### Important Notes

- Use only PALRAM approved accessories, including EPDM rubber washers, silicones, sealing tape, closure fixtures etc.
- For clear SUNTUF onto wooden purlins, apply white acrylic paint, or aluminum tape, in order to prevent over-heating of the purlins.



### Cutting Tips

- Use jigsaw or circular saw with fine tooth blades.
- Apply high blade speed with moderate feeding rate.
- Support the sheets near the cutting line.
- Clean the dust and cutting chips after cutting.



### Fastening Tips

- Use adjustable electric screwdriver.
- The screw must be installed perpendicular to the SUNTUF sheet.
- **Important: Do not over-tighten.**




### Safety

- Do not step directly on the panel.
- Use stepping boards.
- Work according to local safety regulations.



### Handling and Storage

- Store in a dry shaded place, protect from direct sunlight and rain.
- Avoid covering the sheets with heat absorbing materials.
- Avoid contact or environment of chemicals.
- Protect the sheets from any physical damage.

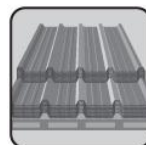

Inasmuch as PALRAM Industries has no control over the use to which others may put the material, it does not guarantee that the same results as those described herein will be obtained. Each user of the material should make his own tests to determine the material's suitability for his own particular use. Statements concerning possible or suggested uses of the materials described herein are not to be construed as constituting a license under any PALRAM Industries patent covering such use or as recommendations for use of such materials in the infringement of any patent. PALRAM Industries or its distributors cannot be held responsible for any losses incurred through incorrect installation of the material. In accordance with our company policy of continual product development you are advised to check with your local PALRAM Industries supplier to ensure that you have obtained the most up to date information.